

Dangers, Warnings and Safeguards

Failure to follow the “Dangers, Warnings and Safeguards” may result in a fire and serious bodily injury or death.

- Read the manual completely and listen to the instructional video before using The Jen-u-wine Jerry for the first time.
- For non-commercial use only.
- Do not use for other than intended use.
- Keep the smoker a minimum of 12 inches away from combustible surfaces.
- Use heat resistant gloves when operating the smoker.
- Do not touch hot surfaces. Use handles or knobs.
- The cooking chamber door must remain closed during the cool-down cycle. Failure to do so can cause burn back in the hopper.
- Do not modify the holes in the burn grate.
- Do not add pellets by hand to the burn grate when the smoker is in use.
- Use extreme caution when the pellet hopper is open. Never insert fingers into the pellet hopper. Serious risk of injury from the auger may result.
- The pellet hopper cover should be closed when the smoker is operating.
- Do not operate a wet smoker.
- Do not use your smoker in the rain or around any source of water.
- Exterior surfaces on the smoker will be hot when in use and during cool-down.
- Do not leave your smoker unattended during operation. Children and pets should be closely supervised when near the smoker.
- Do not transport your smoker while operating or when the smoker is hot. Make sure the fire is out and the smoker is cool before moving.
- Use caution when moving unit. Tipping too far toward back could cause the unit to fall, causing serious injury.
- Should a grease fire occur, turn the controller to the “off” position and unplug the unit to stop the fans. Keep the lid closed until the fire is out.
- Do not leave hot oven unattended with door open.
- If The Jen-u-wine Jerry goes out during operation do not restart it without removing the cooking grates and heat diffuser/drip plate to inspect for pellet overflow.
- After a period of non-use, the hopper, auger and firepot must be inspected for obstruction.
- Do not store the smoker cover or other flammable items under or near the smoker.
- Do not expose to rain. Store product out of the elements when not in use – out of reach of children.
- If your smoker is stored outside, care should be taken to assure that water does not enter the pellet hopper. (The use of a smoker cover is highly recommended).

- Do not clean this product with a water spray.
- To avoid electrical shock, do not immerse cord, plugs or any part of unit in water or other liquid.
- Unplug from outlet when not in use and before cleaning. To disconnect, turn any controls to “OFF”. Remove plug from outlet. Allow to cool before putting on or taking off parts.
- Do not operate with a damaged cord or plug or if the smoker malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the manufacturer may cause injuries.
- Connect to properly grounded outlets only.
- Do not let electric cord hang over edge of a table or counter, or touch hot surfaces.
- Extension cords may be used if care is exercised. If an extension cord is used a) the marked electrical rating of the extension cord should be at least as great as the smoker’s electrical rating, b) the extension cord should be of a grounding-type, 3-wire cord, and c) the longer cord should be arranged so that it will not drape over any countertop or tabletop where it can be pulled on by children or pets or tripped over unintentionally.
- Outdoor extension cords should be used with outdoor use products and are surface marked with suffix letters “W-A” and with a tag stating “Suitable For Use With Outdoor Appliances”.
- To reduce the risk of electric shock, keep extension cord connection dry and off the ground.
- **READ AND SAVE ALL THESE INSTRUCTIONS**
- **CHECK JENUWINEJERRY.COM PERIODICALLY FOR UPDATES**